



---

## AREA HEATER

---

### SAFETY – BEFORE LIGHTING

1. This appliance must **not be used indoors**
2. This appliance shall only be used in **an above ground open air** situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection
3. Maintain a clearance of a **50cm radius around the appliance** and a **1m clearance from the top of the appliance** at all times
4. Heater must be placed on level and adequate footing and must be readily accessible
5. **DO NOT** place articles on or against this appliance
6. **DO NOT** store flammable materials near this appliance
7. Make anyone within the presence of this appliance aware of the hazards of high surface temperatures, burns and clothing ignition
8. Children should be carefully supervised in the area of this appliance
9. **NEVER** hang anything including clothes or other flammable items on the appliance
10. **DO NOT** operate this appliance unless it is fully assembled with wire burner guard in place
11. **DO NOT** spray aerosols in the vicinity of this appliance whilst it is in operation
12. **DO NOT** attempt any repairs on this appliance

### LIGHTING

1. Connect LPG bottle and test for leaks with soapy water. Keep bottle and hose within the housing.
2. Ensure that the control knob is off. Slowly open the gas cylinder
3. Push in the control knob and turn anti-clockwise to 'HIGH'
4. Check flame at the burner. If burner does not light immediately, turn knob to 'OFF' position and wait 30 seconds before attempting to light again by turning knob to 'HIGH'. This may take several attempts – wait 30 seconds between each
5. With burner alight keep knob de-pressed for 15 seconds
6. Set knob to desired setting 'HIGH' or 'LOW'

### SHUT DOWN

1. After use turn off all knob and LPG gas bottle