



GAS BARBECUE – HEATLIE

SAFETY – BEFORE LIGHTING

1. This appliance must **not be used indoors**
2. This appliance shall only be used in **an above ground open air** situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection
3. Ensure that the barbeque is at least **20cm away from any combustible surfaces** and that there is at least **1.5m clearance overhead**.
4. The barbeque should be placed on a **firm solid surface**.
5. The barbeque **should be levelled**, with a slight incline to the front to ensure the fat runs into the front valley.
6. Place waste container under the spout, in the holder on the front of the unit. Ensure that it is properly located so that it cannot be accidentally dislodged.
7. Check that gas burner controls are in the OFF position.
8. Turn on valve at the LPG Cylinder.
9. Check there are **no leaks** – use soapy water
10. No smoking near this appliance.



LIGHTING

1. Turn on front gas burner by pushing down the knob and rotating to high. Then push down piezo ignition button until burner ignites – alternatively, light the front burner using a 40mm match through the porthole located on the right hand side of the front panel. If the ignition does not occur within 15 seconds, turn off and wait 30 seconds before attempting again.
2. To light rear burner, turn knob to high and push piezo igniter or allow 10 seconds for 'cross-lighting' to occur.
3. Do not leave gas on HIGH for more than 5 minutes without food load as this may distort or damage hotplate.

SHUT DOWN

1. After use turn off all knobs and LPG Bottle
2. Barbeque plate should be scraped and wiped down, but do not scour the plate or use chemicals – other than purpose made barbeque cleaners.