



GAS SPACE HEATER

SAFETY – BEFORE LIGHTING

1. This appliance must **not be used** in an enclosed area with **volume less than 500m³**. This **excludes most residential dwellings**.
2. Maintain a clearance of a **1.5m radius around the front of the appliance** and a **1m clearance from the top of the appliance** at all times
3. Heater must be placed on level and adequate footing and must be readily accessible
4. **DO NOT** place articles on or against this appliance
5. **DO NOT** store flammable materials near this appliance
6. Make anyone within the presence of this appliance aware of the hazards of high surface temperatures, burns and clothing ignition
7. Children should be carefully supervised in the area of this appliance
8. **NEVER** hang anything including clothes or other flammable items on or near the appliance
9. **DO NOT** spray aerosols in the vicinity of this appliance whilst it is in operation
10. **DO NOT** attempt any repairs on this appliance

OPERATING INSTRUCTION

****For Operation as a FAN ONLY – simply turn Power Switch On****

1. Connect LPG bottle and test for leaks with soapy water.
2. Ensure that the control knob is off. Slowly open the gas cylinder
3. Turn **Gas Cock** to **open** position (in line with hose)
4. Turn **Power Switch** to the **ON** position.
5. Depress the **Gas Relay Button** and at the same time depress the **Ignition Button** until ignition has occurred. Maintain depression of the **Gas Relay Button** for a **minimum of 20 seconds**, after which time the burner will remain alight.
6. Where fitted, adjust the **Gas Pressure Regulator** to the desired setting.

SHUT DOWN

1. Turn the **Gas Supply off** at cylinder
2. Turn **Gas Cock to the closed** position (90 degrees to line of hose)
3. After allowing the **fan to run for 60 seconds** for cool down, turn the **Power Switch** to the **OFF** position
4. Remove the electrical plug from the mains power socket.